



BEC 6800RUL

4G/ LTE Outdoor Router


Quick Start Guide



PLEASE READ THE QUICK START GUIDE AND FOLLOW THE STEPS CAREFULLY. THIS QUICK START GUIDE WILL HELP YOU INSTALL THE DEVICE PROPERLY AND AVOID IMPROPER USAGE. IF YOU NEED MORE INFORMATION ON THIS SOFTWARE CONFIGURATION, PLEASE REFER TO THE USER MANUAL ON CD-ROM.


Package Contents

- ✓ **BEC 6800RUL 4G/LTE Outdoor Router**
- ✓ **This Quick Installation Guide**
- ✓ **CD containing User Manual**
- ✓ **M25 Cable Gland**
- ✓ **25ft Outdoor LAN cable**
- ✓ **PoE Injector**
- ✓ **Grounding Cable**
- ✓ **Mounting Kit**

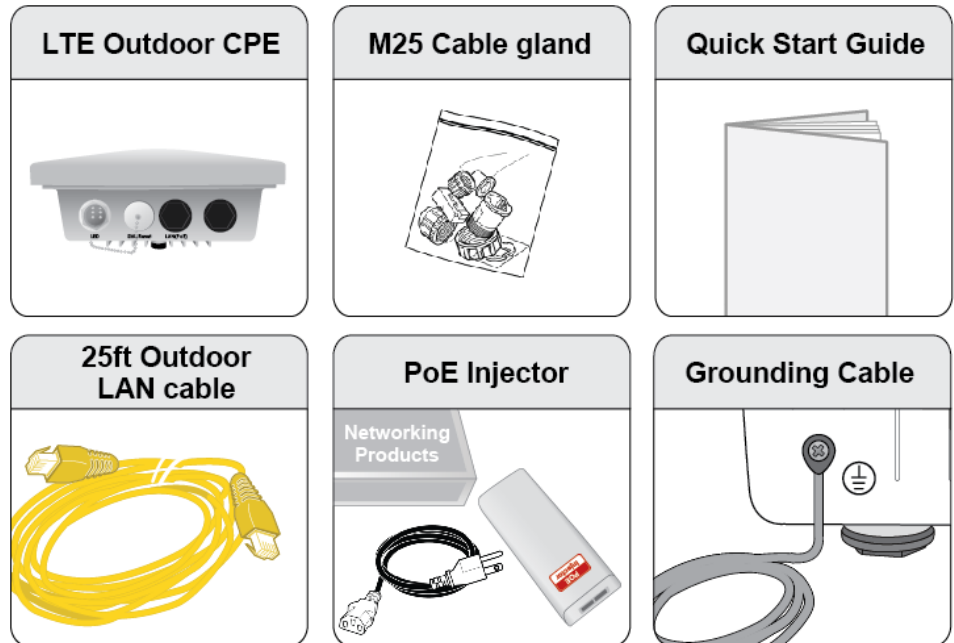

Mounting Kit Package contents

(#RT4R)

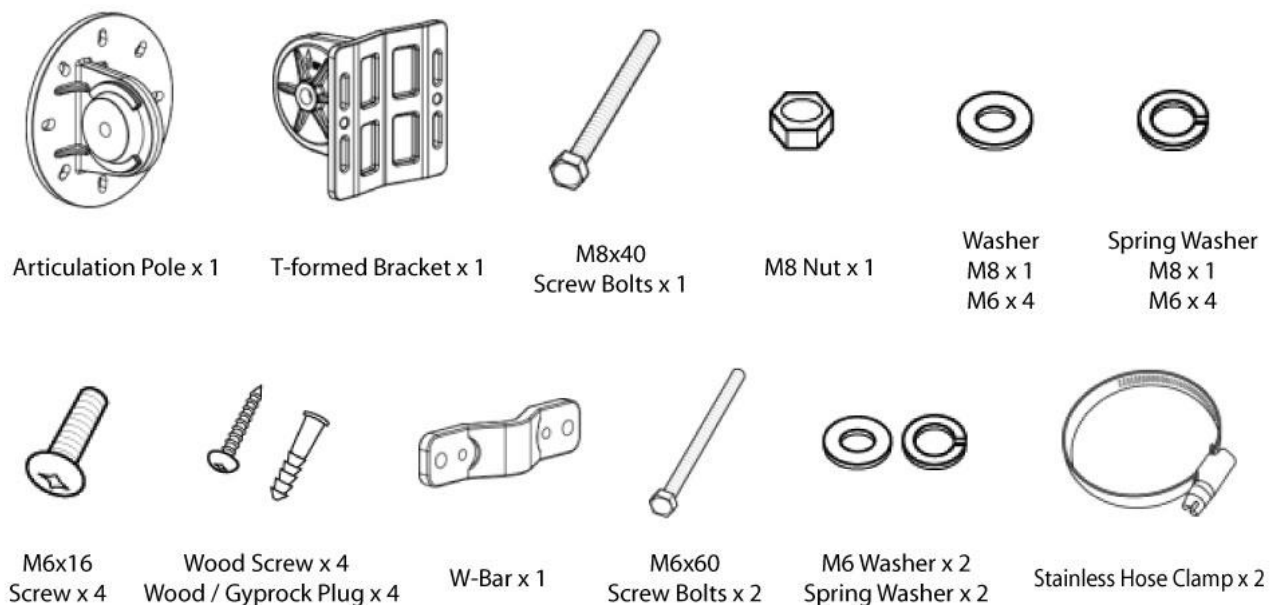

Hardware Overview



CONNECTORS	DESCRIPTION
SIM/ Reset	Insert the SIM card into the SIM slot; press the reset button to reset device or restore to factory default settings
LAN(PoE)	Connect to a computer/ Passive PoE using an Ethernet cable.


LED Description:

LED		DESCRIPTION
LED	1. Power	Lit green when system power on.
	2. LAN(PoE)	Lit green when the LAN port is connected to an Ethernet device. Blink when data is being transmitted/ received
	3. Boot LED	Lit green means system boot up successfully.
	4. LTE	Lit green when 4G/LTE service is ready to precede the dial-up.
	5. Internet	Lit green when Internet is available.

Mounting Kit Installation

1. Attach the Articulation Pole to the Enclosure


Attach the articulation pole to the back of the BEC 6800RUL using M6*16 screws and washers.

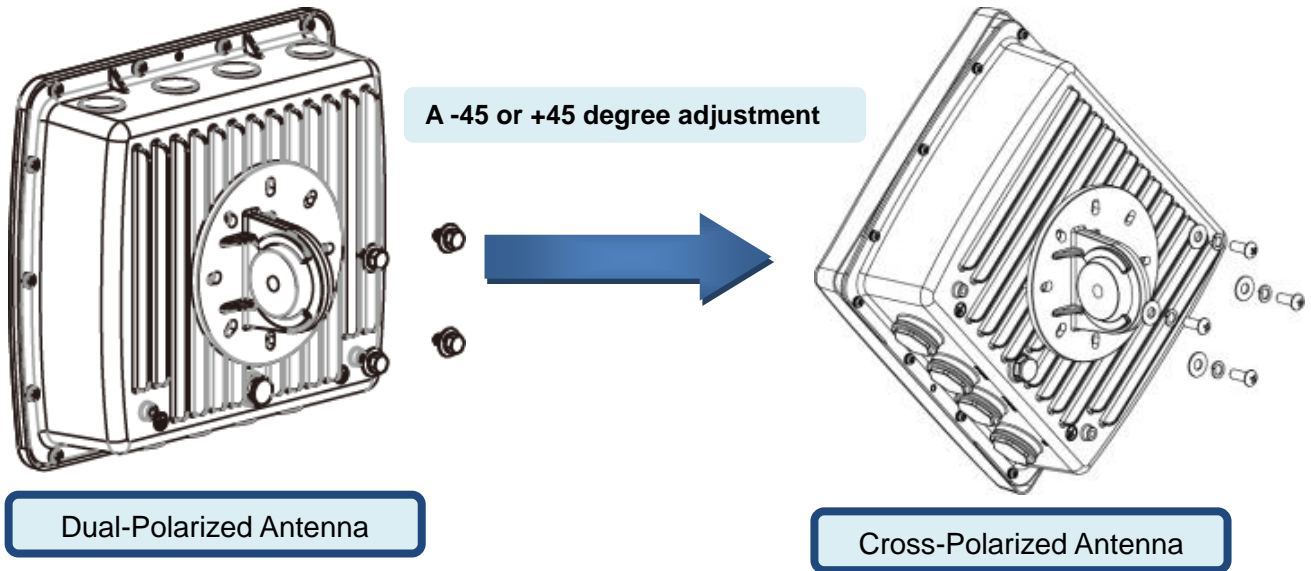

2. Mounting on Wall or a Pole

2.1 Mounting on Wall


Fix the T-formed Bracket to the wall using wood/ drywall screws.

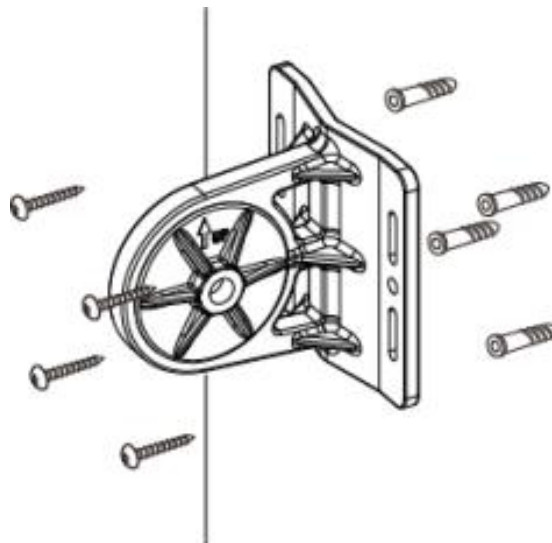

2.2 Mounting on a Pole


2.2.1a Mounting for pole smaller than 1.5" (38mm)

Attach the T-formed Bracket and the W-bar to the pole then use M6x60 bolts, spring washer and washer to fix the mounting kit onto the pole.

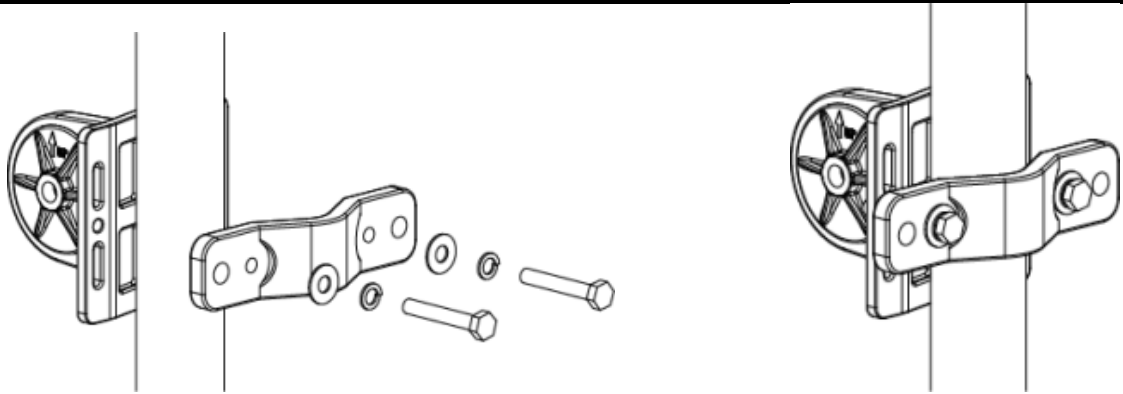

2.2.1b Mounting for pole larger than 1.5" (38mm)


Fix the T-formed Bracket to the pole by using the stainless hose clamp.

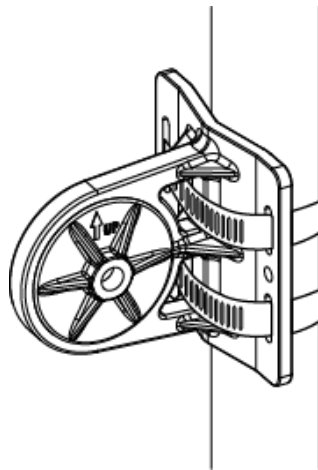



2.2.1 Mounting BEC 6800RUL on a Pole with T-formed Bracket

Attach the articulation pole to the T-formed bracket by using M8x40 bolts, nut, spring washer and washer.

Dual-Polarized Antenna – The original of the source position, the nominal position, is seeing **BEC logo** when facing toward the 6800RUL,

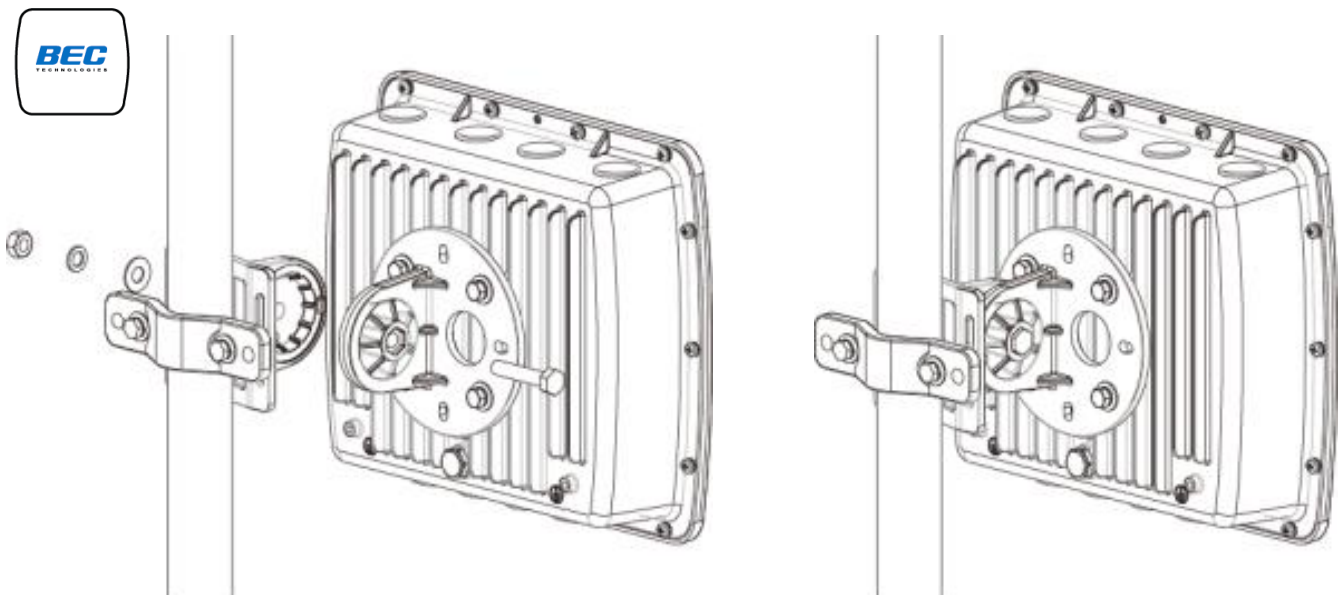


Cross-Polarized Antenna – From the nominal position, adjusting and rotating the 6800RUL -45 or +45, anticlockwise or clockwise, degree angle.

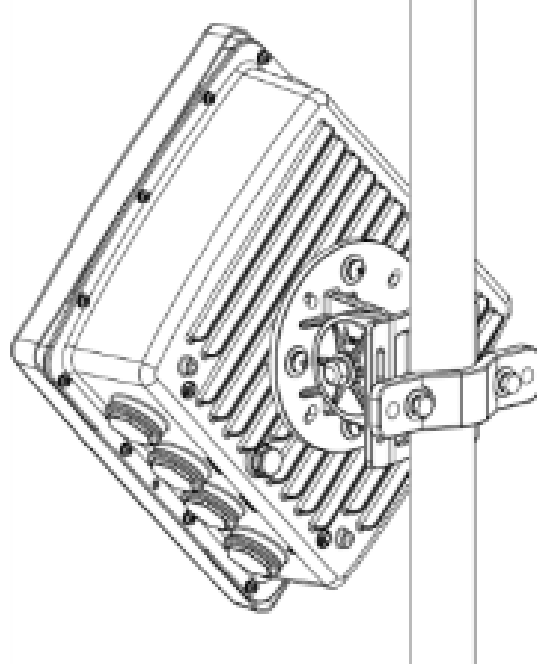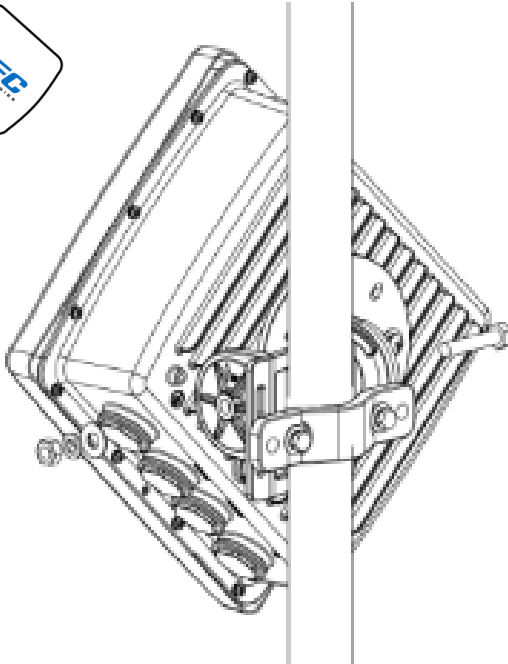

3. Position Adjustment

3.1 Using a Embedded Directional Antenna


- 3.1.1 Find the location and best angle for getting the strongest signal from the base station. The CPE must be directed towards the nearest base station.

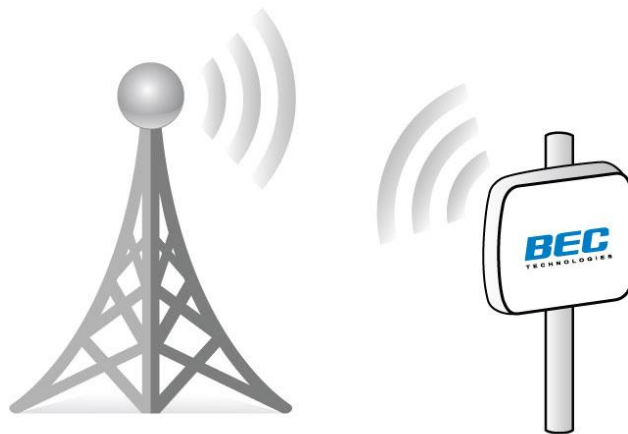

- 3.3.2 Adjusting CPE position to get a better reception and/or fine-tuning the CPE orientation (in horizontal/vertical position or 45 degree angle position) to have the best signal strength


3.2 Using two (2) Omni Directional Antennas

- 3.2.1 Find the location and best angle for getting the strongest signal from the base station. The CPE must be directed towards the nearest base station.

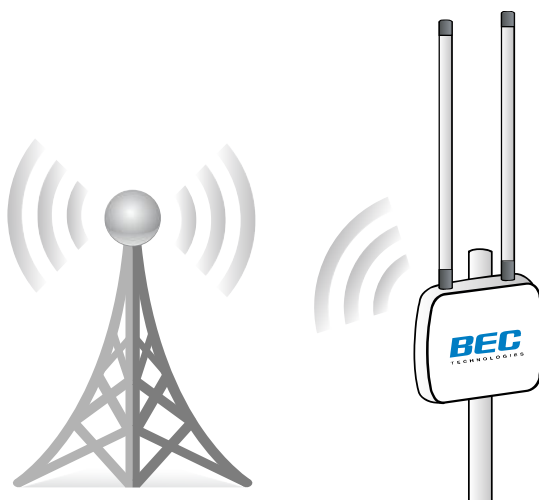


3.3 Using an External Yagi Antenna

Find a good spot to mount the Yagi antenna, such as a chimney or rooftop, to avoid trees, building, and any metal objects. The Yagi antenna must be directly pointing to the nearest base station for strongest signals.

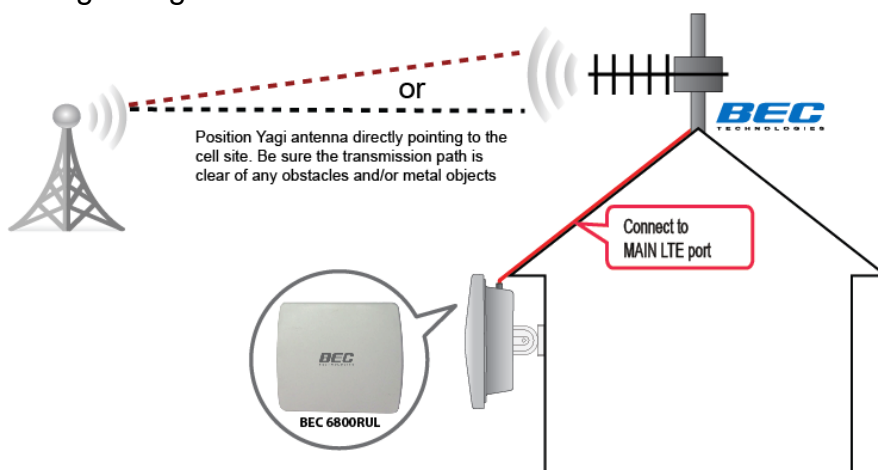

4 Grounding the CPE to Complete the Installation

Attach the ground cable to the CPE and tighten the screw

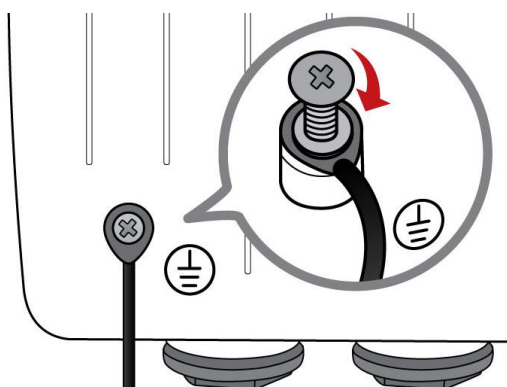


Connecting to the Router

1. Power on your LTE router

Step 1: Assemble M25 cable gland



Step 2: Unscrew the LAN (PoE) port and insert the supplied outdoor Ethernet cable (RJ-45) through material A-D, and then connect the RJ-45 Ethernet cable into the CPE port.

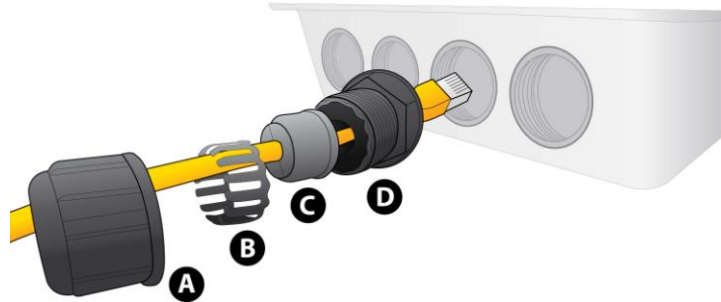


Step 3:

3.1: Insert (C) at the back end of (D)


3.2: clip (B) on (C)

3.3: keep (B) close to (D)

3.4: then tighten (A).

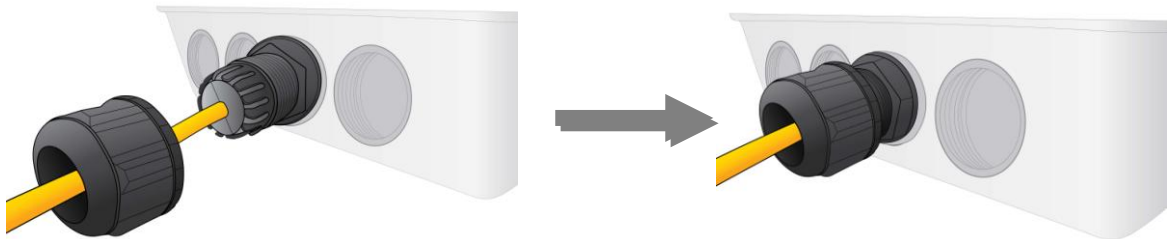


Step 4: Insert the other end of outdoor Ethernet cable (RJ-45) to the supplied PoE injector **P+D/OUT** port. Connect another Ethernet cable (RJ-45) directly to the **Data/IN** port and the other end of cable to a switch or broadband router. Plug the PoE power cable to an electrical outlet to power on your LTE router.

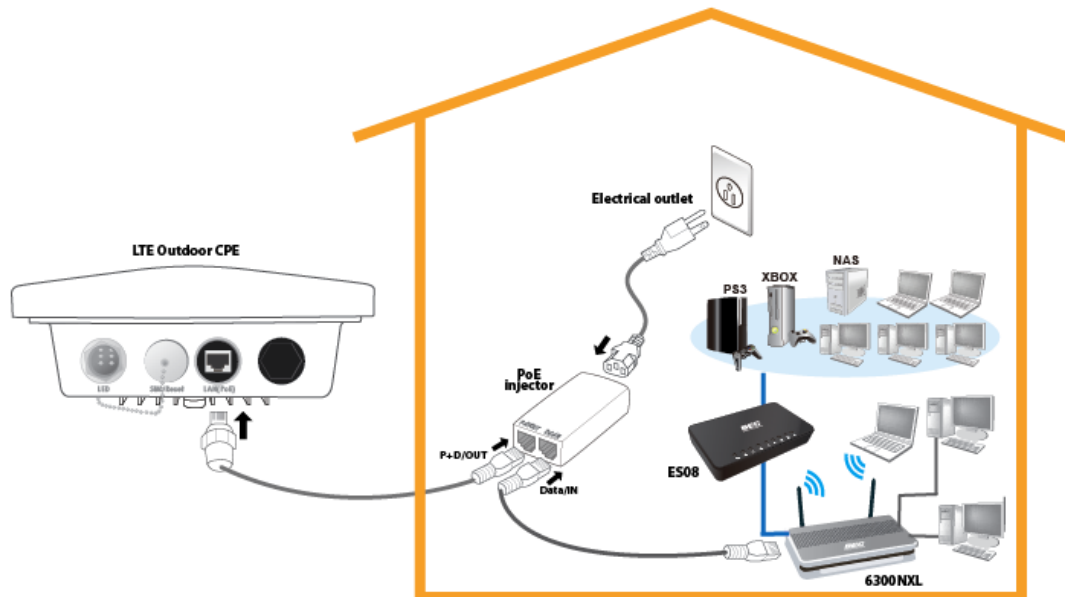


2. Set up your LTE Internet Connection


Step 1: Unscrew the cap of SIM card slot.

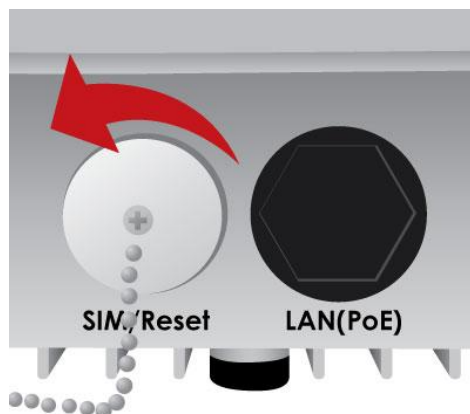

Step 2: Slide the SIM card into the card slot of the device. Make sure that the SIM card is slid into the bottom of the slot with a click.

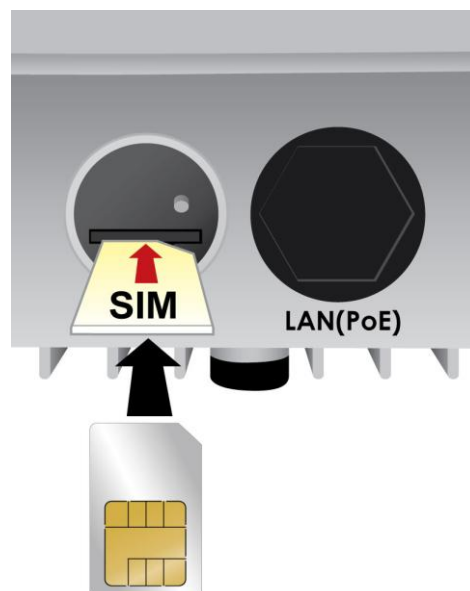

Step 3: Screw the cap back tightly.

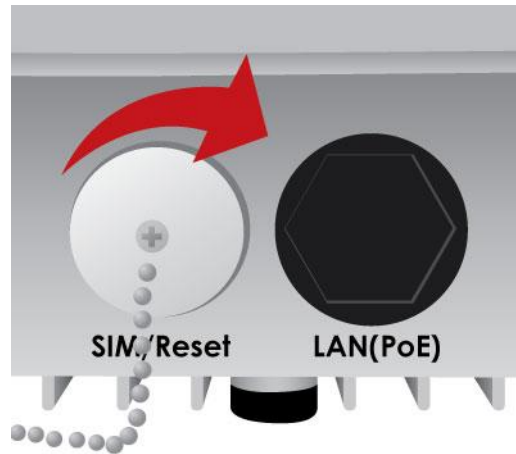

Please power off the device before inserting or removing the SIM card.

Step 4: Login to your BEC 6800RUL LTE router

The default IP of modem is **192.168.1.254** with subnet 255.255.255.0. Make sure the attached PC to this router is in the same subnet and has an IP address in the range between 192.168.1.1 ~ 192.168.1.253.

Open a web browser and type **http://192.168.1.254** in the URL address bar.

URL Address bar: type
http://192.168.1.254



The login prompt will appear. Input the default username (**admin**) and password (**admin**) for Account type, Administrator. *This username / password may vary by different Internet Service Providers.


Please see the relevant sections of user manual for detailed instructions on how to configure your CPE.

Step 5: Use the **Quick Start** wizard for fast Internet connection setups.

5.1 Time Zone Configuration: Enable and select your Time Zone then click Continue to go on to the next step

Time Zone: select your **time zone**

Next Step: click **Next**

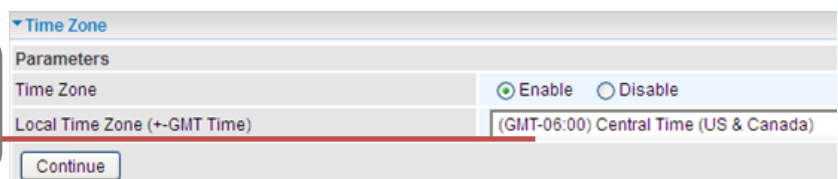


5.2 WAN / Internet Connection Setup: Select the appropriate WAN protocol then fill out the information provided by your ISP in all relevant parameters. For 3G/4G_LTE connection, if your Service Provider is not on the list, please select **Other** and fill out all of

the appropriate fields.

- 5.3 Saving Configuration & Connection attempts to the Internet:** Wait for 30 - 60 seconds for the router to establish an Internet connection. If no responses for more than 120 seconds please check the SIM Card connection or/and information is/are

being input properly.

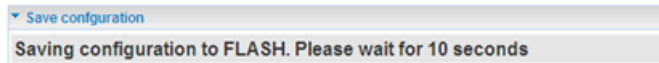

- 5.4 Internet Connection Established:** “Success!” message will be shown if the Internet connection is ready to go. If not, please check your WAN, Internet Connection, setup again.



Troubleshooting

1. None of the LEDs are on when you turn on the CPE.

Check the connection between the adapter and the CPE. If the error persists, you may have a hardware problem. In this case you should contact technical support.

2. You have forgotten your CPE login and/or password.

Try the default login and password, please refer to User Manual. If this fails, you can restore your router to its factory settings by holding the Reset button on the back of your router for 6 seconds or more.

3. Can't ping any PCs on the LAN.

Check the LAN(PoE) LED on the CPE. The LED should be on for the port that has a PC connected. If it is off, check the cables between your CPE and the PC. Make sure you have uninstalled any software firewall for troubleshooting. Verify that the IP address and the subnet mask are consistent between the router and the workstations.

Product Support and Contact Information

Most problems can be solved by referring to the **Troubleshooting** section in the User Manual. If you have other inquiries or need further technical support, please contact with your Internet Service Provider or visit us at www.bectechnologies.net.